

# Energy Meter Selection Guide

www.victronenergy.com



ET112



ET340



EM24



B21



B23/B24

Venus OS supports several types of energy meters, some of which are stocked by Victron and others that need to be purchased from the manufacturers directly, such as Carlo Gavazzi or ABB.

The Energy Meters are used in systems with a [GX device](#) to measure the output of a PV Inverter, a AC Genset or as a Grid Meter in an [ESS installation](#). It also can be used to measure AC loads.

Most of the Energy Meters connect to a GX device via RS485 either through a wired connection via our [RS485 to USB interface](#) or wirelessly via our [Zigbee to USB and Zigbee to RS485 converters](#). Its data is then displayed on a GX device and our [VRM portal](#). Alternatively, the EM24 Ethernet meter can be used, provided the meter connects to a local network in such a way that the GX device can reach it.

### To make a selection, first decide if you need a single- or three-phase meter:

Which Energy Meter should be selected depends on the installation, the number of phases you want to measure and the maximum current per phase. **Examples:** For a three-phase utility connection, use a three-phase meter. For a three-phase PV Inverter, use a three-phase meter as well. For a single-phase utility connection, use a single-phase meter. And in an installation with a single-phase utility connection, that also has a PV Inverter that needs measuring with an energy meter, then you can use two pieces of ET112 or use the ET340. If the application exceeds the max. current rating, use an Energy Meter with current transformers. Note that most PV Inverters feature "direct-readout" by the Victron system and thus don't need their output to be measured by an energy meter.

### Now, based on current, select the model:

Requirement	Measurement type	Solution
Single-phase up to 100A	Direct/Shunt	ET1XX / EM1XX / ABB B21
Three-phase up to 65A/phase	Direct/Shunt	ET340 / EM24 / EM340 / EM540 / ABB B23
Single-phase more than 100A/phase	Current Transformers	Not available, use a 3-phase CT solution
Three-phase more than 65A/phase	Current Transformers	EM24* / EM330 / EM530 / ABB B24

\* EM24DINAV53DISX only, not stocked by Victron

### In case of EM24, select between RS485 and Ethernet connection:

The Ethernet mode will have an advantage in installations where an Ethernet network is available. Rather than having to pull an RS485 wire between the main AC distribution board and the storage system, the existing Ethernet can be used. The disadvantage is that this relies on that network functioning properly – in case of issues the storage system will switch to idle mode: passthrough.

The EM24, EM3XX, EM5XX and ABB meters use vector registration to count energy. This is the preferred method for countries, such as Germany and Austria and most other countries. The other energy meters use arithmetic registration. See [FAQ Q8](#) in the Victron Energy Meter manuals for further details regarding energy counting differences.

Energy Meter	Manual	Part number	Display	Phases	Maximum Current Rating	Measurement type	Communication	Remarks
ET112	<a href="#">ET112</a>	REL300100000	No	1	100A	Direct/Shunt	RS485	ET112DINAV01XS1X
ET340	<a href="#">ET340</a>	REL300300000	No	3	65A per phase	Direct/Shunt	RS485	ET340DINAV23XS1X
EM24 RS485	<a href="#">EM24 RS485</a>	REL200100000	LCD	3	65A per phase	Direct/Shunt	RS485	EM24DINAV93XISX
EM24 Ethernet	<a href="#">EM24 Ethernet</a>	REL200200100	LCD	3	65A per phase	Direct/Shunt	Ethernet	
<b>Other Energy Meters with GX firmware support</b>								
EM111	<a href="#">EM111</a>	Not stocked	LCD	1	45A	Direct/Shunt	RS485	
EM112	<a href="#">EM112</a>	Not stocked	LCD	1	100A	Direct/Shunt	RS485	
EM330 <sup>1</sup>	<a href="#">EM330</a>	Not stocked	LCD	3	5A per phase	CTs	RS485	EM330DINAV53HS1X27 EM330DINAV53HS1PFB27
EM340 <sup>1</sup>	<a href="#">EM340</a>	Not stocked	LCD	3	65A per phase	Direct/Shunt	RS485	EM340DINAV23XS1X27 EM340DINAV23XS1PFB27
EM530 <sup>1</sup>	<a href="#">EM530</a>	Not stocked	LCD	3	5A per phase	CTs	RS485	EM530DINAV53XS1X EM530DINAV53XS1PFC
EM540 <sup>1</sup>	<a href="#">EM540</a>	Not stocked	LCD	3	65A per phase	Direct/Shunt	RS485	EM540DINAV23XS1X EM540DINAV23XS1PFC
ABB B21 <sup>1,2</sup>	<a href="#">B21</a>	Not stocked	LCD	1	65A	Direct/Shunt	RS485	2CMA100155R1000 Silver
ABB B23 <sup>1,2</sup>	<a href="#">B23</a>	Not stocked	LCD	3	65A per phase	Direct/Shunt	RS485	2CMA100169R1000 Silver
ABB B24 <sup>1,2</sup>	<a href="#">B24</a>	Not stocked	LCD	3	6A per phase	CTs	RS485	2CMA100183R1000 Silver

<sup>1</sup>selected models are supported - <sup>2</sup> Zigbee connection is not supported